

Knapsack Power Sprayer.

Spare Parts Diagram

TU 26 Engine




**BALWAN KNAPSACK POWER SPRAYER
BALWAN ENGINE PART LIST**

Dia No	Code	Part Description
1	SPAS-001100-1-TU-26-2011	BL-Screw Assy-1-TU-26-2011
2	SPAS-001100-02-TU-26-2010	BL-SCREW & WASHER-02-TU-26-2011
3	SPAS-001100-3-TU-26-2011	BL-Fan Cover-3-TU-26-2011
4	SPAS-001100-4-TU-26-2011	BL-Clutch Step Screw 6*21-4-TU-26-2011
5	SPAS-001100-5-TU-26-2011	BL-Washer M 8*05-5-TU-26-2011
6	SPAS-001100-06-TU-26-2011	BL-CLUTCH-06-TU-26-2011
7	SPAS-001100-7-TU-26-2011	BL-Washer M 8*05-7-TU-26-2011
8	SPAS-001100-08-TU-26-2011	BL-SPRING-08-TU-26-2011
9	SPAS-001100-9-TU-26-2011	BL-Clutch-9-TU-26-2011
10	SPAS-001100-10-TU-26-2011	BL-Pin B 3*8-10-TU-26-2011
11	SPAS-001100-11-TU-26-2011	BL-NUT CONICAL SPG-11-TU-26-2011
12	SPAS-001100-12-TU-26-2011	BL-COIL IGNITION-12-TU-26-2011
13	SPAS-001100-13-TU-26-2011	BL-ROTOR-13-TU-26-2011
14	SPAS-001100-14-TU-26-2011	BL-Front Half Cranck Case-14-TU-26-2011
15	SPAS-001100-15-TU-26-2011	BL-GASKET CRANKCASE-15-TU-26-2011
16	SPAS-001100-16-TU-26-2011	BL-OIL SEAL-16-TU-26-2011
17	SPAS-001100-17-TU-26-2011	BL-Stop Ring-17-TU-26-2011
18	SPAS-001100-18-TU-26-2011	BL-BEARING BALL-18-TU-26-2011
19	SPAS-001100-19-TU-26-2011	BL-PLUG SPARK-19-TU-26-2011
20	SPAS-001100-20-TU-26-2011	BL-COVER TOP/COVER A/Y-20-TU-26-2011
21	SPAS-001100-21-TU-26-2011	BL-BOLT SCH-21-TU-26-2011
24	SPAS-001100-24-TU-26-2011	BL-CYLINDER-24-TU-26-2011
25	SPAS-001100-25-TU-26-2011	BL-GASKET CYLINDER-25-TU-26-2011
26	SPAS-001100-26-TU-26-2011	BL-RING TOP-26-TU-26-2011
27	SPAS-001100-27-TU-26-2011	BL-PISTON SET-27-TU-26-2011
28	SPAS-001100-28-TU-26-2011	BL-BOLT STUD-28-TU-26-2011
29	SPAS-001100-29-TU-26-2011	BL-MUFFLER-29-TU-26-2011
30	SPAS-001100-30-TU-26-2011	BL-GASKET MUFFLER-30-TU-26-2011
31	SPAS-001100-31-TU-26-2011	BL-SCREW & WASHER-31-TU-26-2011
32	SPAS-001100-32-TU-26-2011	BL-CLIP PISTON PIN-32-TU-26-2011
33	SPAS-001100-33-TU-26-2011	BL-PIN PISTON-33-TU-26-2011
34	SPAS-001100-34-TU-26-2011	BL-BEARING NEEDLE-34-TU-26-2011
35	SPAS-001100-35-TU-26-2011	BL-Screw M5*14-35-TU-26-2011
36	SPAS-001100-36-TU-26-2011	BL-STARTER A/Y-36-TU-26-2011
37	SPAS-001100-37-TU-26-2011	BL-Starter Pully Assy-37-TU-26-2011
38	SPAS-001100-38-TU-26-2011	BL-Rear Half Crank Case-38-TU-26-2011
39	SPAS-001100-39-TU-26-2011	BL-CRANK SHAFT ASSY-39-TU-26-2011
40	SPAS-001100-40-TU-26-2011	BL-KEY WOODRUFF-40-TU-26-2011
41	SPAS-001100-41-TU-26-2011	BL-GASKET INSULATOR-41-TU-26-2011
42	SPAS-001100-42-TU-26-2011	BL-INSULATOR-42-TU-26-2011
43	SPAS-001100-43-TU-26-2011	BL-SCREW & WASHER-43-TU-26-2011
44	SPAS-001100-44-TU-26-2011	BL-GASKET CARBURETOR-44-TU-26-2011
45	SPAS-001100-45-TU-26-2011	BL-CARBURETOR (D)-45-TU-26-2011
46	SPAS-001100-46-TU-26-2011	BL-CASE CLEANER-46-TU-26-2011
47	SPAS-001100-47-TU-26-2011	BL-SCREW & WASHER-47-TU-26-2011
48	SPAS-001100-48-TU-26-2011	BL-ELEMENT CLEANER-48-TU-26-2011
49	SPAS-001100-49-TU-26-2011	BL-COVER CLEANER-49-TU-26-2011
50	SPAS-001100-50-TU-26-2011	BL-SCREW & WASHER-50-TU-26-2011
51	SPAS-001100-51-TU-26-2011	BL-Starter Case Joint-51-TU-26-2011
52	SPAS-001100-52-TU-26-2011	BL-Case Starter-52-TU-26-2011
53	SPAS-001100-53-TU-26-2011	BL-Reel-53-TU-26-2011
54	SPAS-001100-54-TU-26-2011	BL-Spring-54-TU-26-2011
55	SPAS-001100-55-TU-26-2011	BL-Spring-55-TU-26-2011
56	SPAS-001100-56-TU-26-2011	BL-E Start Spring Assy-56-TU-26-2011
57	SPAS-001100-57-TU-26-2011	BL-Rope Starter-57-TU-26-2011
58	SPAS-001100-58-TU-26-2011	BL-Knob Starter-58-TU-26-2011
59	SPAS-001100-59-TU-26-2011	BL-Reel Stopper Assy-59-TU-26-2011
60	SPAS-001100-60-TU-26-2011	BL-E Start Pulley-60-TU-26-2011
61	SPAS-001100-61-TU-26-2011	BL-Screw-61-TU-26-2011
75	SPAS-001100-61-TU-26-2011	BL-Fule Filter-75 TU-26-2011

BALWAN

Knapsack Power Sprayer.

Spare Parts Diagram
Pump

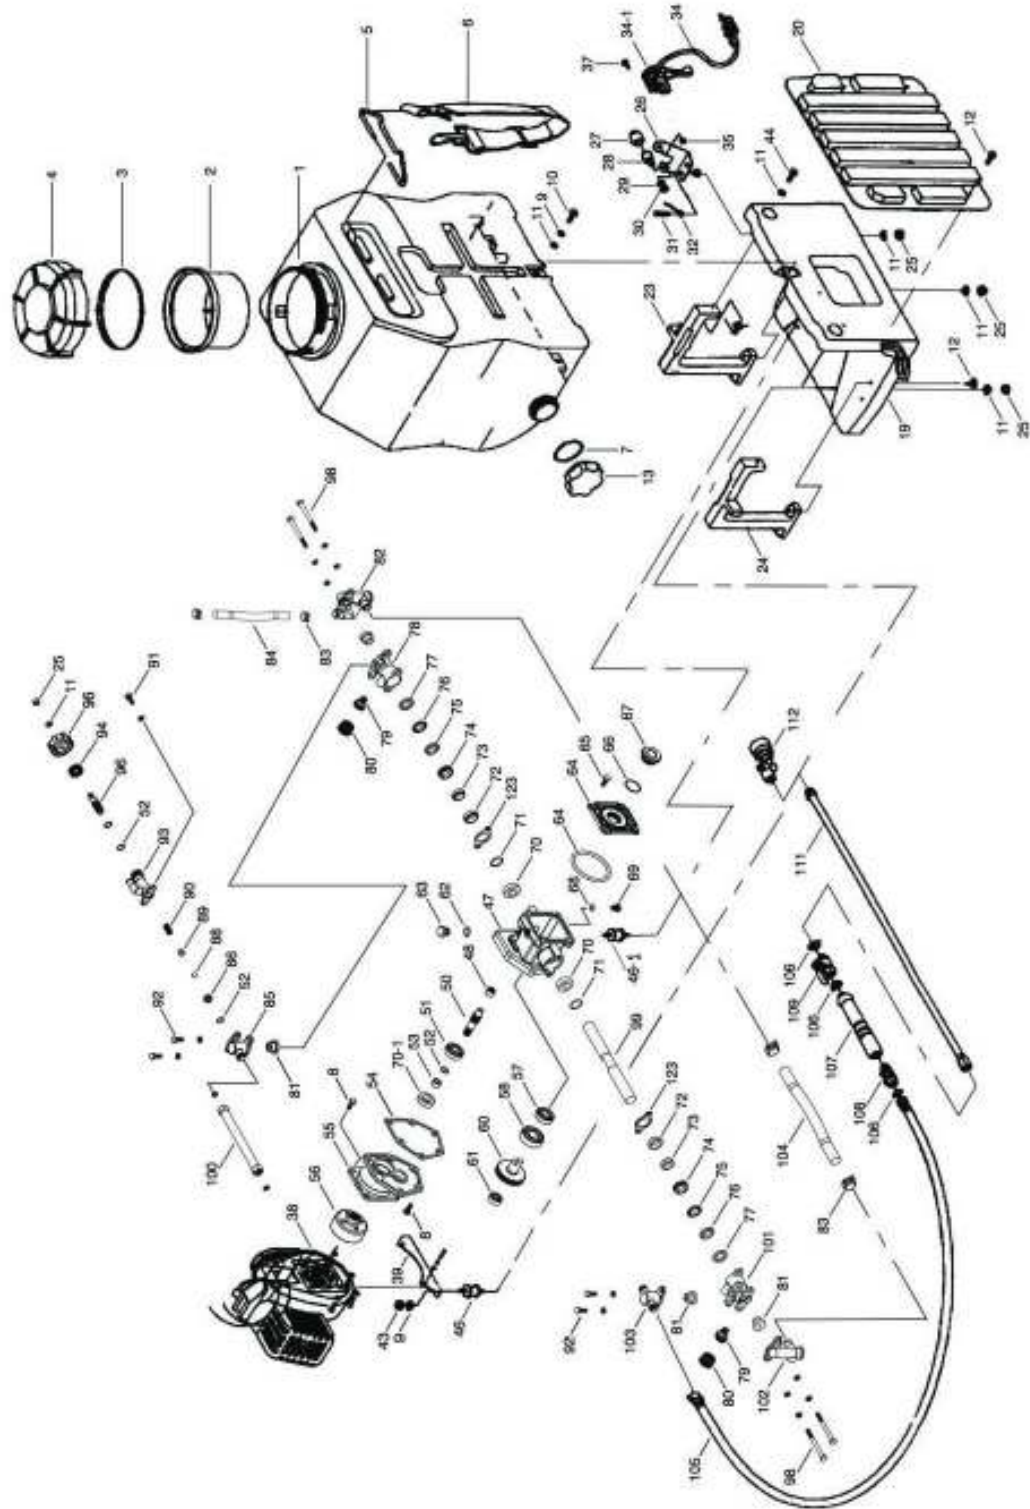

**BALWAN KNAPSACK POWER SPRAYER
BALWAN PUMP PART LIST**

Dia No	Code	Part Description
1	SPAS-001100-1-BODY-2011	BL-Tank-1-BODY-2011
2	SPAS-001100-2-BODY-2011	BL-Staner-2-BODY-2011
3	SPAS-001100-3-BODY-2011	BL-Gasket-3-BODY-2011
4	SPAS-001100-4-BODY-2011	BL-Container Cover-4-BODY-2011
5	SPAS-001100-5-BODY-2011	BL-Chain Holder-5-BODY-2011
6	SPAS-001100-6-BODY-2011	BL-Strap-6-BODY-2011
7	SPAS-001100-7-BODY-2011	BL-Gasket-7-BODY-2011
8	SPAS-001100-8-BODY-2011	BL-Screw-8-BODY-2011
9	SPAS-001100-9-BODY-2011	BL-Spring Washer-9-BODY-2011
10	SPAS-001100-10-BODY-2011	BL-Screw-10-BODY-2011
11	SPAS-001100-11-BODY-2011	BL-Washer-11-BODY-2011
12	SPAS-001100-12-BODY-2011	BL-Screw-12-BODY-2011
13	SPAS-001100-13-BODY-2011	BL-Drain Cap-13-BODY-2011
19	SPAS-001100-19-BODY-2011	BL-Frame-19-BODY-2011
20	SPAS-001100-20-BODY-2011	BL-Pad-20-BODY-2011
21	SPAS-001100-21-BODY-2011	BL-Screw-21-BODY-2011
23	SPAS-001100-23-BODY-2011	BL-Stand Right/Left A/y-23-BODY-2011
25	SPAS-001100-25-BODY-2011	BL-Nylon Nut-25-BODY-2011
26	SPAS-001100-26-BODY-2011	BL-Fixed Plate-26-BODY-2011
31	SPAS-001100-31-BODY-2011	BL-Screw-31-BODY-2011
32	SPAS-001100-32-BODY-2011	BL-Cord Comp-32-BODY-2011
34	SPAS-001100-34-BODY-2011	BL-Cable Comp-34-BODY-2011
35	SPAS-001100-35-BODY-2011	BL-Nylon Nut-35-BODY-2011
37	SPAS-001100-37-BODY-2011	BL-Screw-37-BODY-2011
38	SPAS-001100-38-BODY-2011	BL-Engine-38-BODY-2011
39	SPAS-001100-39-BODY-2011	BL-Engine Stand-39-BODY-2011
40	SPAS-001100-40-BODY-2011	BL-Washer-40-BODY-2011
41	SPAS-001100-41-BODY-2011	BL-Spring Washer-41-BODY-2011
42	SPAS-001100-42-BODY-2011	BL-Screw-42-BODY-2011
43	SPAS-001100-43-BODY-2011	BL-Nut-43-BODY-2011
46	SPAS-001100-46-BODY-2011	BL-Joint-S-46-BODY-2011
47	SPAS-001100-47-BP-2011	BL-Crank Case-47-BP-2011
48	SPAS-001100-48-BP-2011	BL-Bearing-48-BP-2011
50	SPAS-001100-50-BP-2011	BL-Shaft-50-BP-2011
51	SPAS-001100-51-BP-2011	BL-Bearing-51-BP-2011
52	SPAS-001100-52-BP-2011	BL-O-Ring-52-BP-2011
54	SPAS-001100-54-BP-2011	BL-Gasket-54-BP-2011
55	SPAS-001100-55-BP-2011	BL-Drum Case-55-BP-2011
56	SPAS-001100-56-BP-2011	BL-Drum Clutch-56-BP-2011
57	SPAS-001100-57-BP-2011	BL-Bearing-57-BP-2011
58	SPAS-001100-58-BP-2011	BL-Bearing-58-BP-2011
60	SPAS-001100-60-BP-2011	BL-Gear-60-BP-2011
61	SPAS-001100-61-BP-2011	BL-Bearing-61-BP-2011
62	SPAS-001100-62-BP-2011	BL-O-Ring-62-BP-2011
63	SPAS-001100-63-BP-2011	BL-Oil Inlet Cup-63-BP-2011
64	SPAS-001100-64-BP-2011	BL-Crank Case Cover-64-BP-2011
66	SPAS-001100-66-BP-2011	BL-O-Ring-66-BP-2011
67	SPAS-001100-67-BP-2011	BL-Oil Glass-67-BP-2011
68	SPAS-001100-68-BP-2011	BL-O-Ring-68-BP-2011
69	SPAS-001100-69-BP-2011	BL-Drain Plug-69-BP-2011
70	SPAS-001100-70-BP-2011	BL-Oil Seal-70-BP-2011
71	SPAS-001100-71-BP-2011	BL-O-Ring-71-BP-2011
72	SPAS-001100-72-BP-2011	BL-Adjusting Ring-72-BP-2011
73	SPAS-001100-73-BP-2011	BL-Grease Ring-73-BP-2011
74	SPAS-001100-74-BP-2011	BL-V-Packing Upper Seal-74-BP-2011
75	SPAS-001100-75-BP-2011	BL-V-Packing-75-BP-2011
76	SPAS-001100-76-BP-2011	BL-V-Packing (Fabric)-76-BP-2011
77	SPAS-001100-77-BP-2011	BL-Packing Seat-77-BP-2011
78	SPAS-001100-78-BP-2011	BL-Cylinder-78-BP-2011
81	SPAS-001100-81-BP-2011	BL-Valve Assy.-81-BP-2011
116	SPAS-001100-116-BP-2011	BL-WingNut Nipple-116-BP-2011

[illegible]

